

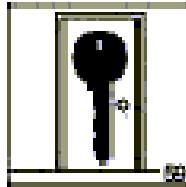


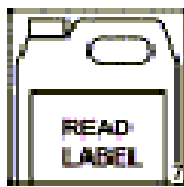

TECHNICAL INFORMATION SHEET (TIS)

PREMCLEAN

Rinse Aid - Code No 101003

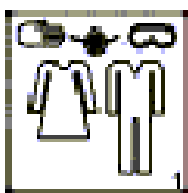

HEALTH AND SAFETY INFORMATION

Appropriate Health and Safety information is detailed on the individual product label of relevant Health and Safety Data Sheet.

PACKAGING

1 x 20 litres

Premclean Code No. 101003

INTRODUCTION

The Premclean comprehensive range, which has been specifically formulated to cater for, all dishwashing requirements and water types and hardness encountered throughout Europe.

First Class results can only be achieved using the correct equipment and products within the framework of a regular cleaning programme. The range of products enables the user to select those with precisely the right characteristics for the various tasks.

In the case of difficulty in making the correct choice or for further information on Premclean cleaning systems and extensive range of cleaning and maintenance chemicals, equipment and machines, contact our Head Office in Limassol.

RINSE AID

A liquid rinse additive for use in automatic dishwashing machines and sterilising tanks to prevent spotting or streaking and reduce drying time. Suitable for both hard and soft water. **Rinse Aid** is low foaming and is effective over a range of operating temperatures between 50° - 80°C. **Rinse Aid** contains a co solvent to prevent haze and gives good water sheeting effect. It is more readily dispersible above its cloud point, hence faults such as spotting are obviated and it also shows excellent flash characteristics on adding to hot water.

The pH of **Rinse Aid** under typical analysis is 2.0.

DIRECTIONS

Always wear the appropriate protective clothing and read product label and Safety Data Sheet before use.

Follow machine manufacturer's instructions: -

CLEANING TASK	RECOMMENDED DILUTION
Machine Rinse Cycle	150 – 400 ppm (0.15 – 0.4 grammes per litre)

Suitable for use in single tank or multi-stage dishwashers and in sterilising sinks. **Rinse Aid** does not cause an increase in foaming in multi-stage dishwashers when subsequent rinse water is added into the pre-wash or main tanks.

In general, if items are coming out of the machine too hot to handle and dry rapidly to a clean, smear free finish, the machine is operating correctly.

Distributed By:

Premclean Industrial Cleaning Manufacturers Ltd – P.O.Box 54901 – 3729 Limassol - Cyprus

E-mail: info@pilacouristrading.com – Web: www.pilacouristrading.com

Tel. No.: +357 25343160 – Fax No.: +357 25745959